
Touchpad Quick Start




1. Turn On

- Press and hold the power button (top left side).
- If the screen goes dark, press the power button.

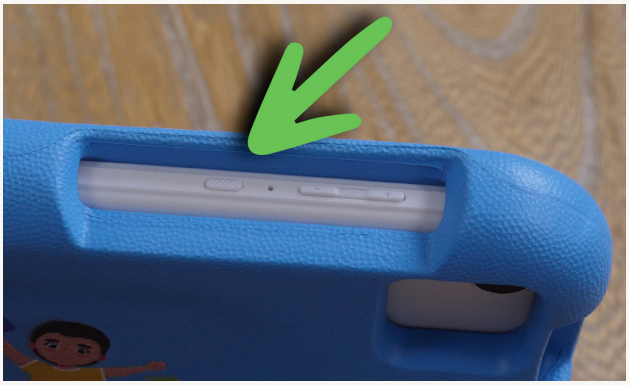

2. Find Games

- Swipe up on the home screen to see all the games.
- Tap to play.

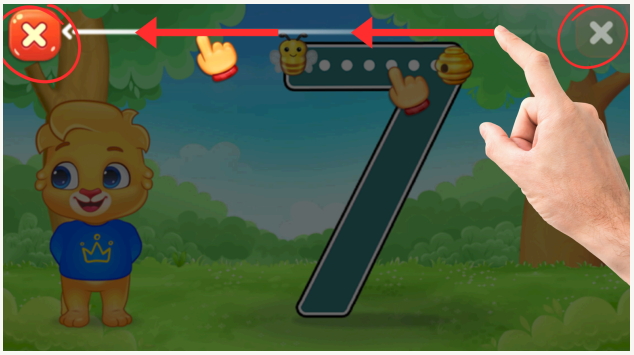

3. Exit a Game

- Drag your finger across the top of the screen from red x to red x.



4. Charge Every Day

- Plug in the charger each night.
- Make sure the charger is plugged in tight.

Want to learn more?

apseed.org

SCAN ME

980-643-0451